

What is SudSpenser

Your *SudSpenser* system provides a revolutionary method to store 140 ounces of liquid laundry detergent and allow dispensing into all types of home washing machines at the touch of a button.

System Components

SudSpenser is a self encompassing, integral unit designed to fit on top, or behind the washer/dryer or may easily be wall mounted using the provided mounts. The *SudSpenser* system is supplied with a 60" dispensing hose, hand wand, wand hanger and wall mounting bracket.

Top load washer systems are provided with *SudsGauge* a detergent measuring device that mounts under the cover of the washer to measure and introduce detergent into the washer when the cover is closed.

Installation Considerations

Unpack your *SudSpenser* then check to ensure no damage occurred during shipping.

Determine the best location for your particular laundry equipment. *SudSpenser* may be positioned on top of front load washers, wall mounted, or behind the washer dryer using the adhesive strips provided. Top load washers require *SudSpenser* to be positioned behind the



Child Resistant Locking Ring

An optional wand locking ring to discourage toddlers from dispensing detergent. Twist to flat surface area for dispensing, turn flat area away from lever to prevent depression.



Lock Position



Dispense Position

Operating Tips

Your *SudSpenser* is simple to operate, there are no replaceable components and maintenance is generally not required.

- ?? Always fill using only clean liquid detergent.
- ?? Keep fill cap tight, failure to do so will cause activation pump to operate more frequently.
- ?? Keep out of reach of children, optional child resistant wand locking ring available.
- ?? Do not overfill, space required for operation.
- ?? Route hose properly to prevent kinking.

Troubleshooting

- ?? Detergent does not dispense. Check to ensure wall transformer is secured into active plug. If pump operates check for low detergent level.
- ?? Air is dispelled out of wand. Check fluid level.
- ?? Wand drips or does not shutoff. Foreign object in wand shutoff valve. Unscrew round plastic knob under wand lever, remove spring and valve assembly, clean then reassemble.
- ?? Activation pump keeps recycling or does not shutoff. Loose refill cap - retighten to seal.
- ?? Other issues? Questions? Contact Us.

Innovative Dispensing Solutions, LLC
8307 Partridgeberry Dr.
Baldwinsville, NY 13027

Website: www.sudspenser.com
E-Mail: mail@sudspenser.com

SudSpenser™

Installation & Operating Instructions



Imagine not having to lift laundry detergent containers for up to 90 wash loads.

You have purchased one of the newest products to hit the laundry room since the advent of the automatic washer.

No More Clutter or Filling Messy Laundry Caps



A Thing of the Past

Front Load Washer Installation

Once the location is determined proceed as follows:

To mount on top simply set *SudSpenser* on top of washer, fill with your favorite liquid detergent by removing the top cap. A ball float becomes visible once the detergent level reaches the top, approx 140 ounces. Do not attempt to overfill once the float is displayed. Screw the cap down firmly.

Determine a convenient location to mount the wand holder bracket (2" plastic split white cylinder) in a vertical position. Generally for front load washers locate on the side next to the detergent drawer (see illustration).



Remove the red protective tape and press the wand holder to the side of the washing machine, or if a wall mount is preferred press the wand holder tight against the wall. Insert the wand into the wand holder for storage and retrieval

INSTRUCTIONS COMMON TO ALL UNITS

Plug in the 120/1/60 wall transformer to a properly grounded wall outlet . *SudSpenser* operates on low (6VDC) voltage .

DO NOT USE AN EXTENSION CORD

The motor will operate for a few seconds to charge the detergent reservoir then shut off. For initial operation, hold the wand outlet over the detergent container then press the wand lever . You will hear air being displaced then detergent will be dispelled, the system is then ready for operation.

Top Load Washer Installation

Top load washers do not permit top mount, therefore two options prevail. The *SudSpenser* may be mounted behind the washer or dryer sandwiched between the wall and unit.

Generally most washer/dryers require 4" "wall clearance, the *SudSpenser* is designed to drop down between the wall with the top edge of the unit to rest on the washer/dryer console and secured with industrial grade adhesive strips.



If a wall mount location is preferred the 12" long mounting bracket must be secured level to the drywall with the two togglebolts provided. Concrete wall mount requires the appropriate fastener. The *SudSpenser* unit simply rests on top of the wall mount bracket and easily removed for filling.

Determine a convenient location to mount the wand holder bracket (2" plastic split white cylinder) in a vertical position.. Remove the red protective tape and press the wand holder to the side of the washing machine,. Ensure area to secure wand holder is dry and free of residue. If a wall mount is preferred press the wand holder tight against the wall. Insert the wand into the wand holder for storage and retrieval.

To complete the *SudSpenser* installation refer to :

INSTRUCTIONS COMMON TO ALL UNITS

as shown previously under front loader instructions.

Top Load SudsGauge

SudSpenser for top load washers is provided with *SudsGauge*, a clearly calibrated plastic measuring device mounted to the underside of the washer cover. To install *SudsGauge* refer to installation operation instruction sheet supplied separately.



To operate, simply hold the wand, press the button, fill the *SudsGauge* to the desired level and close. The detergent automatically drains into the washer.

The *SudSpenser* system is designed for use with conventional liquid detergents and the new highly concentrated, 2X and 3X types.

Refer to *SudsGauge* installation and operating instruction sheet to calibrate for your particular type of detergent and concentration level.

Wall Mounting Instructions

Determine *SudSpenser* location, position bracket level on wall as shown and secure with toggle bolts

Concrete walls will require concrete anchors.

